



# Your Hawker 125 parts superstore

• Stock for sale or exchange

• Large inventory – FAA Certified

## Part Number Description

### Avionics

39205-00-01	SECONDARY FLIGHT DISPLAY
630-006	AURAL TONE GENERATOR
63540-255-1	BEARING DISTANCE INDICATOR
822-0872-001	COMPUTER, MACH TRIM
990-3333-160	AUDIO CONTROL PANEL

### Electrical & Lighting

01-0790044-54	BEACON
100-0540-04	EMERGENCY BATTERY ASSEMBLY
100-1600-04	STATIC INVERTER, 1500 VA
161043-701	ELECTRONIC SEQUENCE UNIT
164540-800A	APU ELEC SEQUENCE UNIT
23076-004-1	STARTER GENERATOR
23080-XXX	STARTER GENERATOR
23091-002	STARTER GENERATOR
30-0538-7	WING POSITION LIGHT
51509-006C	GENERATOR CONTROL UNIT
51539-006H	GENERATOR CONTROL UNIT
5400612-1	T/R RELAY BOX
60-1321-1	BATTERY POWER SUPPLY
60-1755-1	POWER SUPPLY
A-1074C	CONTACTOR
A703XXX	CONTACTOR
C-87706-1	SIGNAL SUMMING AMP
CB02701	GENERATOR CONTROL UNIT
G-9950-XX	ROTATING BEACON
LDA150A8C	CONTACTOR
LDA200B18C	CONTACTOR, INVERTER
LDG150Y4	CONTACTOR, GROUND
LDK150Y1-1	CONTACTOR
PC-250	STATIC INVERTER W/MOD C
SD105K	CONTACTOR
SD-130L	CONTACTOR

## Part Number Description

### Environmental & Pneumatics

0901-2	BLOWER
102466-XX	REGULATOR, AIR PRESS
103278-XX	VALVE, OUTFLOW
104968	VALVE, REFRIG BYPASS
107312-4-1	PNEUMATIC RELAY
1092TH100-47	AIR VALVE ACTUATOR
109812-9-1	VALVE, BUTTERFLY SHUT OFF
1150642-3	SENSOR
123188-1	BLEED AIR CHECK VALVE
130156-1	CHECK VALVE
130530-5	PRESSURE CONTROLLER
132322-3-1	VENTURI FAN
203880-3-1	COOLING TURBINE
2340594-4	HEAT EXCHANGER
321262-1	VALVE
321292-1	SHUT OFF VALVE
3213788-XX	BLEED AIR MIXER VALVE
3215086-3	PRESS REG VALVE
3215224-2	VALVE
321776-1-1	BYPASS VALVE
34988-2	ACTUATOR, ROTARY
45C3-111	BLOWER, CABIN RECIRC
5901-2	BLOWER
617452-4	CONTROL, CABIN TEMPERATURE
978836-5-1	VALVE

### Fire & Ice

182A	FIRE EXTINGUISHER WITHOUT SQUIBB
30402104	FIRE EXTINGUISHER WITH SQUIBBS
33200002X	FIRE EXTINGUISHER WITH SQUIBBS
4190-01	EXTINGUISHER APU W/ SQUIBB
BA02801-1	ALTERNATOR, WS HEAT

## Part Number Description

### Flight Controls

140-1701-3	AILERON - WINGLET APPLICATION
25-8CW159XX	FLAP SCREWJACK, LH
25-8CW161XX	FLAP SCREWJACK, RH
25-8TE1-XX	ELEVATOR ASSEMBLY
25-8TF513-1A	STABILIZER ASSY - VERTICAL UPPER
25-8TR105-11A	TRIGGERED - RUDDER ASSY
25-8WB9-XX	AIRBRAKE ASSY, TOP
25-8WF251-XX	FLAP ASSEMBLY
25-8WF3-XXXX	FLAP ASSEMBLY
25-8WG111-61A	AILERON LH NO TAB
25-8WG1-11XX	AILERON AND TAB
25-8WS1513-68	PANEL-DISTRIBUTER, RH ONLY
25-9WG1-112A	AILERON RH
25-9WG5-49A	TRIM TAB ASSEMBLY
25TR209AG	RUDDER TAB
614MK2	FLAP CONTROL
617MKX	FLAP CONTROL BOX
AC67214	RUDDER BIAS STRUT
AIR46520-X	JACK, AIRBRAKE RH
AIR46521-X	JACK, AIRBRAKE LH
S25-7WB5000XXX	AIRBRAKE ASSY, LOWER
S25-9WG50002AB	RH AILERON
TY1684-01A	FLAP CONTROL UNIT

### Fuel & Powerplant

0107KPU1	PROCESSOR
064135141-XX	THRUST REVERSER CONTROL
1500-00-65	FUEL BOOST PUMP
2101402-2	SYNCHRONIZER
2101822-1	SYNCHRONIZER
2118330-2	ECU
2118756-1	SYNC/APR
27441482	ENGINE ANTI-ICE VALVE
2B6-72	FUEL PUMP, APU



Part Number	Description
2C40-2	FUEL PUMP
3070800-35	FUEL CONTROL
540158-4-2	ACTUATOR
5453305-3	RETARD ASSY-THROTTLE
5453511-11	FAN FLAP ACTUATOR
9-127-55	FUEL FLOW TRANSMITTER
9-328-26	FUEL FLOW/FUEL USED INDICATOR
9-464-76	FUEL FLOW INDICATOR
AT208-1	TOTALIZER
HTE9044-001	ACTUATOR

#### Hydraulics

2160H000-006	HYD POWER PACK
42022-03	PUMP, HYDRAULIC
61P64HN2	SOLENOID VALVE
AIR45466-0	VALVE
AIR45574-X	ACCUMULATOR, HYDRAULIC
DS259-3	ACCUMULATOR, THRUST REVERSER

#### Instrumentation

10280	TRANSDUCER, STALL DETECTOR
1611AM3	ALTIMETER
1703-12	SENSOR, STALL
2121-1-XX	INDICATOR, OIL TEMPERATURE
2132-1-XX	INDICATOR
28004-11-02	ALTIMETER
501-1656-02	ATTITUDE DISPLACEMENT INDICATOR
51010-1113	CABIN PRESSURE INDICATOR
5412600-3	T/R CONTROL PANEL
63604-210-2	ITT INDICATOR
696-1-13	INDICATOR, BRAKE PRESSURE
8047-10	ALTIMETER
C87705-4	AOA COMPUTER
H341AGM1	GYRO HORIZON
MS28061-T7	GAUGE HYDRAULIC PRESS
WL1901KID1	FUEL QUANTITY INDICATOR
WL271AS1	STANDBY AIRSPEED INDICATOR
WL718RSA5	ITT INDICATOR

Part Number	Description
<b>Landing Gear</b>	

25-8UD505-XX	MAIN GEAR DOOR ASSY
25-8UD507-1A	FAIRING, MLG, LH
25-8UD63-1A	NOSE DOOR ASSY, REAR
25-8UN3-143A	DRAG STAY ASSY
25UM35XXX	AXLE MLG
25UN1AZ	NOSE GEAR
25UN3AG	DRAG STAY
AC6151X	BRAKE VALVE
AC6521X	MAXARET
AC67732	BRAKE CONTROL VALVE
ACA1218	STRUT, RUDDER BIAS
ACM2274X	BRAKE MODULATOR
ACM26274	MASTER CYLINDER
ACM30946	MASTER CYLINDER
AHA1897	BRAKE ASSEMBLY
AIR45394-0	RELIEF VALVE
AIR45396-X	STEERING JACK
AIR45404-1	ACT, NOSE GEAR
AIR45406-1	VALVE, GEAR SELECT
AIR48485/3	JACK, MLG DOOR
AIR48502/X	ACTUATOR
AIR48503/6	MAIN GEAR JACK
AIR48542-1	LH REVERSING VALVE
S25-7UM50002A	RH GEAR DOOR
S25-8UD5001XX	DOOR ASSY - MAIN GEAR
S25-8UM500XXX	LH GEAR FAIRING ASSY
TP4200X	BRAKE PRESSURE SWITCH

#### Oxygen

176531-35	OXYGEN CYLINDER
MC10-14-XXX	MASK, CREW OXYGEN
MF10-03-02	MASK, CREW OXYGEN
RCA74-XX	ALTIMETRIC VALVE
WKA29720-X	OXYGEN PRESSURE REGULATOR
WKA35964-1	SHUT-OFF VALVE
WKA37447	OXYGEN CYLINDER

#### Structures

25-1BES7AD	LH COWL
25-6ES1-3A	COWL

Part Number	Description
25-6ES239A	COWL, RH OUTBOARD
25-6ES28XXX	COWL
25-8CT219-139A	MOUNTING ASSY-ELEVATOR TRIM SERVOMOTOR
25-8GF173-1A	BULLET FAIRING
25-8GF-227-1A	REAR CONE
25-8UD43-116A	FAIRING ASSEMBLY
25-9WS461-1A	L/E PANEL, L INBOARD
25ES1153-109A	COWL
25ES1155-1XXX	COWL
25ES633-2XXX	COWL
25ES639-107A	COWL
25ES641-157A	COWL
25ES643AD	COWLING
25ES644AD	COWLING
25ESZ141-XX	COWL
25RF203AJ	RADOME
266-0002-3M	T/R DOOR
5451101-XX	AFTERBODY
5453001-X	THRUST REVERSER
5453512-19	ACTUATOR ASSEMBLY, TR
C42B40201-4	INLET
C42B40202-3	LH COWL ASSY, AFT
C42B50201-X	LH COWL ASSY
C42RDB50201-X	INLET COWLING
C46B11000-XX	INLET
C46B12000-X	AFT COWL
C46B14000-X	PANEL ASSY-UPPER
C46B14100-47	SKIN-UPPER COWL
C46B15000-XX	COWL DOOR
C46BM10100-X	MOUNTING
D3372-02	PANEL
F10A5B10204-XX	PANEL ASSY, UP COWL
F10A5B10207-4	SKIN ASSY
HS7830100-X	THRUST REVERSER
S25ES64XXX	COWL
S25WS3001-11A	LEADING EDGE LH OUTBOAR