




Your Socata

• Stock for sale or exchange

parts superstore

• Large inventory – FAA Certified

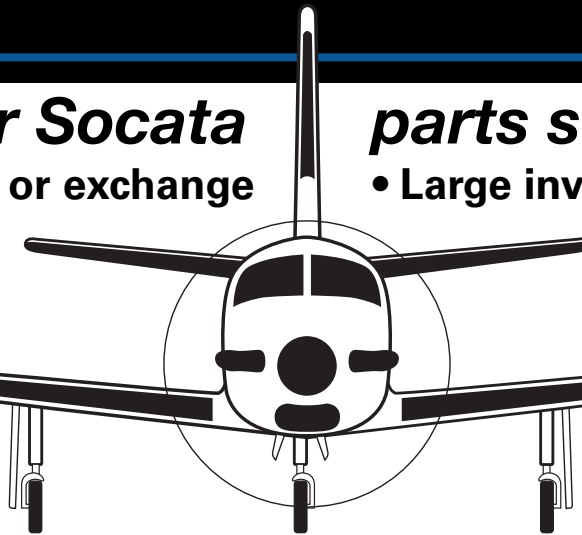

Part Number	Description
Avionics	
DMN27-3	ANTENNA
943200	RECORDER ASSY, ETM KEY
913200-301211C2	ETM INTEGRAL PROCESSOR
805-11500-001	STORMSCOPE WX-500
115-00781-00	INSTALLATION KIT FOR 011-01446-00
071-01599-0100	ANTENNA, TRAFFIC KA 815
071-01214-0002	HF ANTENNA KIT
071-00221-0010	ANTENNA, TRANSPONDER
071-00112-0200	CONFIGURATION MODULE
071-00061-0000	CONFIGURATION MODULE
066-1070-01	DME KN-63
066-01153-0101	RADAR ALTIMETER KRA-405B
066-01152-0101	TCAS PROCESSOR
066-01130-0501	RECEIVER, NAV
065-0085-02	COMPUTER, AIR DATA KDC-222
065-00085-0020	KDC-222
064-01088-0101	DATA RECEIVER
064-01072-0101	POWER AMPLIFIER KPA-1052
011-02268-00	TRANSCEIVER, IRIIDIUM GSR56
011-01904-03	ROLL SERVO ACTUATOR (GEAR SIDE) POST-MOD70-0305-22
011-01446-00	HI POWER TAS PROCESSOR
011-01347-00	PWR ADAPTER/LOW NOISE AMP
011-01346-00	ANTENNA, TCAS
011-01257-20	AUDIO CONTROL PANEL GMA 1347D
011-01110-01	COMPUTER, AIR DATA GDC 74B
011-01110-00	COMPUTER, AIR DATA GDC 74B
011-01108-10	INTEGRATED FLIGHT DISPLAY GDU620
011-01105-40	INTEGRATED AVIONICS UNIT
011-01105-20	INTEGRATED AVIONICS UNIT GIA63W
011-01105-01	INTEGRATED AVIONICS UNIT

011-01105-00	INTEGRATED AVIONICS UNIT
011-01020-10	AUTOPILOT MODE CONTROLLER
011-00960-00	ADAPTER ASSY, TRIM GTA82
011-00916-10	PFID UNIT
011-00883-20	WEATHER RADAR W/ 12" ANTENNA GWX 68
011-00883-00	ANTENNA ASSY, WEATHER RADAR GWX 68
011-00870-00	MAGNETOMETER ASSY GMU44
011-00868-10	ALTITUDE HEADING REFERENCE SYSTEM GRS77
011-00831-00	INTERFACE UNIT, ENGINE/AIRFRAME GEA71
011-00779-30	TRANSPONDER WITH EXTENDED 1 R SQUITTER
011-00779-10	MODULE-TRANSPONDER, MODE S, GTX 33

Electrical

A413A-HDA-CF-14/28	STROBE LIGHT POWER SUPPLY
8012F	STARTER GENERATOR
160GC02Y05	ELECTRICAL POWER CENTER
01-0770028-05	STROBE LIGHT POWER SUPPLY

Environmental

P21030-2	VALVE
979432-5	VALVE
979432-2	VALVE ASSY, BUTTERFLY SHUTOFF
9723A010001	MIXING MANIFOLD
93276A010001	SENSOR ASSY, TEMP
85020-8	WATER SEPARATOR
81250A010001	CONDENSER ASSY
81249A010001	EXCHANGER ASSY, HEAT
81147A010101	VALVE ASSY, OUTFLOW
81146A010101	VALVE ASSY, OUTFLOW
6094C000-001	VALVE ASSY, TEMP CONTROL
44E21-2A	SEPARATOR ASSY, WATER
38E96-2D	VALVE
3214102-1	VALVE
25638-3	VALVE ASSY, FLOW DIVIDER
25638	VALVE ASSY, FLOW DIVIDER



22297A010001	CABIN OUTFLOW VALVE CONTROLLER
2204600-2	COOLING TURBINE
2204600-1	COOLING TURBINE
130618-1	OUTFLOW VALVE CONTROLLER ASSY
11-91364	CABIN AIR EVAPORATOR
103760-2	VALVE ASSY, SAFETY
103760-1	VALVE, OUTFLOW

Fire & Ice

TWH 93-01	CONTROL UNIT, WINDSHIELD HEATING
AN5812-1	PITOT TUBE
42E25-2A	TIMER, WINDSHIELD DE-ICE

Flight Controls

2-5297	ACTUATOR ASSY, FLAP, OUTBD, RH
2-5295	ACTUATOR ASSY, RH
14570002	ACTUATOR ASSY, AILERON TRIM TAB
14540002	ACTUATOR ASSY, ELEVATOR TRIM TAB (POST KIT OPT70)
14540001	ACTUATOR ASSY, ELEVATOR TRIM TAB (PRE KIT OPT70)
1-5297	ACTUATOR ASSY, FLAP, OUTBD, LH
1-5295	ACTUATOR ASSY, FLAP, LH
065-0060-01	SERVO KS-271A
065-0060-00	SERVO KS-271A
065-0059-23	SERVO ASSY, KS-270A
065-0015-01	SERVO MOUNT
011-00894-14	SERVO ACTUATOR (GEAR SIDE) GSM 85
011-00894-08	SERVO ACTUATOR (GEAR SIDE)
011-00878-20	SERVO ACTUATOR (CALCULATOR SIDE) GSA81
011-00878-00	SERVO ASSY, TORQUE ACTUATOR GSA81

Fuel & Powerplant

L88A15-651	FUEL SELECTOR VALVE
L8538233	COOLER ASSY, OIL
A210632	OVERSPEED GOVERNOR
768-404	R.H. INBOARD GAGE (PRE-MOD70-0173-28)
768-403	L.H. INBOARD GAGE (PRE-MOD70-0173-28)
766 977-1	PROBE ASSY, FUEL
762 441-1-0	PROBE ASSY, FUEL, OUTER
762 440-1-0	TRANSMITTER ASSY, FUEL QTY, INTERMEDIATE
762 439-1-0	TRANSMITTER ASSY, FUEL, INNER, RH
762 438-1-0	TRANSMITTER ASSY, FUEL, INNER, LH
722-447	SENSOR ASSY, FUEL LEVEL
93557A010001	BLEED PRESSURE SELECTION SWITCH
6158C000-001	BLEED OVERPRESSURE SWITCH
6104C000-001	OVER TEMPERATURE SWITCH
4589A010001	VALVE ASSY, SHUT-OFF
3244862-2	TORQUE LIMITER
3244862-1	TORQUE LIMITER

2022-B	PUMP ASSY, FUEL, ELECTRIC
2003-B	PUMP ASSY, FUEL, ELECTRIC
1127-02	MECHANICAL FUEL PUMP
1127-01	MECHANICAL FUEL PUMP
14860009	ACTUATOR, LINEAR (INERTIAL SEPARATOR)

Hydraulics

978D6-1	VALVE ASSY, EMERGENCY SELECTOR
1118-3	ELECTRO-HYDRAULIC GENERATOR
1118-04	ELECTRO-HYDRAULIC GENERATOR
1118-03	GENERATOR ASSY, ELECTRO HYDRAULIC
1118-02	GENERATOR ASSY, ELECTRO-HYDRAULIC

Instrumentation

913200-301211C7	INDICATOR, ETM
913200-301211C	INDICATOR, ETM
799-5	DETECTOR ASSY, LIFT
766 976-1	INTERMEDIATE GAGE
523280	INDICATOR, OIL TEMP/PRESSURE
523278	INDICATOR, GAS GENERATOR SPEED
523277	INDICATOR, PROP SPEED
523276	INDICATOR, ENGINE TORQUE
3300-J51	INDICATOR, CABIN ALT/DIFF PRESSURE
19-3005	INDICATOR, FUEL PRESSURE

Landing Gear

VSTS082315	ACTUATOR ASSY, MG/NG (10 YEAR)
VSTS081480	ACTUATOR ASSY, MG/NG (7 YEAR)
LGCP94-11	PANEL ASSY, LANDING GEAR CONTROL
LGCP07-07	PANEL ASSY, LANDING GEAR CONTROL
D23768000	GEAR ASSY, MAIN, RH
D23767001	GEAR ASSY, MAIN, LH
D23766000	GEAR ASSY, NOSE
40-270	MAIN WHEEL
40-262AA	NOSE WHEEL ASSY
30-191	BRAKE
22581-000-00	LINK ASSY, MLG, LOWER
22577-000-00	LINK ASSY, MLG, UPPER
21136-002-02	GEAR ASSY, MAIN, RH
21135-002-02	GEAR ASSY, MAIN, LH
21130-001-01	GEAR ASSY, NOSE
21130-001-00	GEAR ASSY, NOSE

Oxygen

MXP105	STOWAGE CUP, CREW MASK
MC10-02-121	MASK, CREW OXYGEN
DVE90-08	ALTIMETRIC VALVE
833-610-09	BOX, MASK STOWAGE, PASSENGER
2213-6519	OXYGEN BOTTLE